

CONTENTS

Installation	1
Selecting a Location	1
Mounting on a Wall or Ceiling	1
Operation	2
Adjusting the Strobe Speed	2
Adjusting the Angle	2
Changing the Color Filter	2
Replacing the Bulb	2
Care	3
Specifications	4



Mega Strobe

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Mega Strobe helps you create special lighting effects. It comes with large blue, red and green colored filters so you can set a dance party atmosphere in any room. It is simple to use, and its speed control lets you easily vary the flashing speed of the light from 2 to 12 flashes per second.

Your Mega Strobe is ETL listed to UL standards and meets all applicable FCC requirements.

WARNING: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.		



This symbol is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

INSTALLATION

Selecting a Location

You can place your strobe on any flat surface that will support its weight (about 2.5 pounds), or mount it on a wall or ceiling. Choose a location for the strobe that is:

- out of the way of normal activities
- sturdy enough to support the weight of the strobe
- near an AC outlet

Mounting on a Wall or Ceiling

You can secure the strobe to a wall or ceiling using screws and washers (not supplied).

1. Using the mounting bracket as a template, mark the locations for the mounting screws.
2. If you are mounting the strobe on a wall location supported by a stud, drill two holes slightly smaller in diameter than the mounting screws, at the marked locations.
3. Thread one of the two washers onto each mounting screw.
4. Use a screwdriver and the two mounting screws and washers to secure the mounting plate to the marked location. Make sure the mounting bracket is firmly attached to the mounting surface.
5. To attach your strobe to the mounting bracket, place the strobe in the U-

shaped gap on the bracket. Then attach the strobe to the bracket by inserting the two supplied round plastic bracket knobs into each hole on either side of the bracket. Turn the knobs until the strobe is secured.

OPERATION

Note: Before turning on the strobe for the first time, remove the color filters and the plastic bag from the top of the strobe.

To turn on the strobe, insert the AC cord's plug into a standard AC outlet. The cord has a polarized plug that is designed to fit the AC outlet only one way. If the plug does not easily fit into the outlet, do not force it. Simply turn it and try again. Then push in the top of the power button on the back of the unit.

To turn it off, push in the bottom of the power button. Unplug the strobe from the outlet.

Adjusting the Strobe Speed

You can adjust the strobe's flashing speed by rotating **SPEED** clockwise to increase the flashing speed or counterclockwise to decrease the speed.

The speed control is located on a removable handset connected to the body of the strobe by a coiled cable. You can remove this section for remote operation by sliding the handset forward and out of its station on the strobe.


Replace the speed control by sliding it back into its station on the strobe.

Adjusting the Angle

To raise or lower the front end of the strobe, loosen the round plastic bracket knobs on either side of the mounting bracket. Adjust the strobe to the desired angle, then retighten the knobs to secure the angle position.

Changing the Color Filter

Your strobe comes with three colored filters — red, green, and blue. To use a color filter, select a color and slide the filter (rounded side pointing up) into the groove at the top of the strobe.

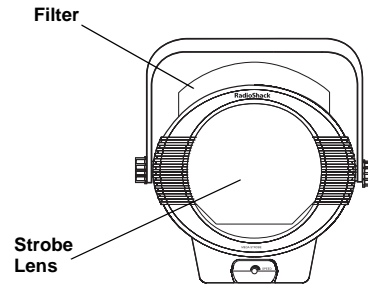

REPLACING THE BULB

If the strobe stops operating, you must replace the bulb.

Caution: Do not use a bulb with ratings other than those specified in this owner's manual. Doing so might damage your strobe or your bulb.

1. Unplug the strobe from the AC outlet.
2. Use a Phillips screwdriver to remove the four screws on the front cover.
3. Remove the front cover with the clear lens (the clear lens is secured to the front panel).
4. Unplug the old bulb from the bulb socket.

Caution: Be sure the old bulb has had a chance to cool before you unplug it.

5. Holding the new bulb with a soft cloth, plug the new bulb into the bulb socket.

Caution: When installing the new bulb, do not touch the glass bulb with unprotected fingers.

Note: Be sure to align the wire leads on the new bulb with those of the old bulb you are replacing.

6. Use only a BUB-0641 bulb (available through your local RadioShack store).
7. Replace the front cover and secure it with the screws.

CARE

Keep the strobe dry; if it gets wet, wipe it dry immediately. Use and store the strobe only in normal temperature environments. Handle the strobe carefully; do not drop it. Keep the strobe away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the strobe's internal components can cause a malfunction and might invalidate its warranty. If your strobe is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Source	
Input	120V, AC 60 Hz
Cord	6 ft ETL-listed Power Cord
Rated Power	≤ 25 VA @ 12 Flashes per Second
Flashing Speed Control	2 to 12 Flashes per Second
Xenon Bulb	Heimann
Color filters	Red, Green, and Blue
Dimension (HWD)	11 ⁷ / ₁₆ × 11 ¹ / ₈ × 7 ¹ / ₂ Inches (290 × 282 × 190 mm)
Weight	38.8 oz (1.1 Kg)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99